




Better solutions through innovation

## Owner's Manual

Model

CX-WIFI

6700530100

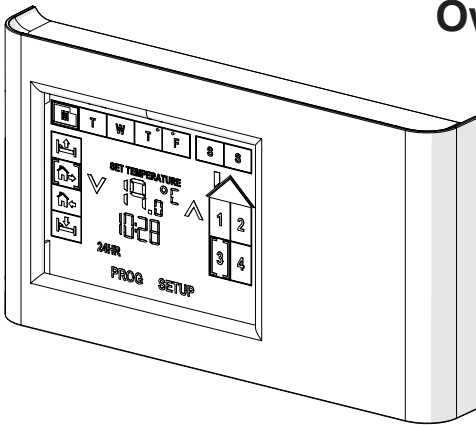

---












**IMPORTANT SAFETY INFORMATION:** Always read this manual first before attempting to install or use this device. For your safety, always comply with all warnings and safety instructions contained in this manual to prevent personal injury or property damage.

To view the full line of Dimplex products, please visit [www.dimplex.com](http://www.dimplex.com)

7214350100R03



## Table of Contents

|  |    |
|--|----|
|  Welcome & Congratulations . . . . . | 3  |
|  IMPORTANT INSTRUCTIONS . . . . .    | 4  |
|  Product Overview . . . . .          | 5  |
|  Installation . . . . .              | 7  |
|  Initial Setup . . . . .             | 10 |
|  Program Schedule Setup. . . . .     | 13 |
|  General Functions . . . . .         | 15 |
|  Operation. . . . .                  | 18 |
|  Maintenance. . . . .                | 20 |
|  Warranty . . . . .                  | 21 |
|  Reference Tables . . . . .          | 22 |

**! NOTE:** Procedures and techniques that are considered important enough to emphasize.

**⚠ CAUTION:** Procedures and techniques which, if not carefully followed, will result in damage to the equipment.


**⚠ WARNING:** Procedures and techniques which, if not carefully followed, will expose the user to the risk of fire, serious injury, or death.

## Welcome & Congratulations

Thank you and congratulations for choosing to purchase a Multi-zone Wi-Fi Programmable CONNEX™ Controller from Dimplex.


**Please carefully read and save these instructions.**


**⚠ CAUTION:** Read all instructions and warnings carefully before starting installation. Failure to follow these instructions may result in a possible electric shock, fire hazard and will void the warranty.

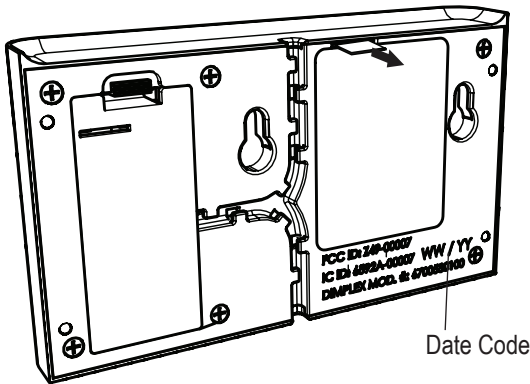


**STOP** NO NEED TO RETURN TO THE STORE

Questions with operation or mounting? Require Parts Information?  
Product Under Manufacturer's Warranty?

Contact us at:  [www.dimplex.com/customer\\_support](http://www.dimplex.com/customer_support)  
For Troubleshooting and Technical Support


OR  **Toll-Free 1-888-DIMPLEX (1-888-346-7539)**  
Monday to Friday 8:00 a.m. to 4:30 p.m. EST  
Please have your model number and product serial number ready. (See above)

# IMPORTANT INSTRUCTIONS

 **CAUTION:** This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 **FCC CAUTION:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device

must accept any interference, including interference that may cause undesired operation of the device.

 **IMPORTANT NOTE:** This equipment complies with RF exposure limits set forth for an uncontrolled environment.

This equipment shall be installed and operated with a minimum separation distance of 7.87 in (20 cm) between the transmitter's radiating structure(s) and the body of the user or nearby persons.



## Product Overview

The CONNEX™ Wi-Fi Controller is a Dimplex exclusive, allowing the user to operate the CONNEX™ Multi-zone controller and synchronized CONNEX™ enabled heaters wirelessly from any remote location.

CONNEX™ wireless technology provides the user the ability to control four individual heat zones and one Wi-Fi-enabled controller for precise temperature management throughout the home. The easy-to-use touch screen allows for 7-day/ 4-event programming that combines with zone heating for incredible energy savings.

### Zones

The controller is setup so that the user can divide their house into up to 4 different heating zones. These can be separate heaters or a selection of one or more heaters that will all be set to run at the same time and temperature settings.

By dividing the house into zones you can program the controller to raise the temperature in particular rooms during the time you normally use them and reduce the temperature when they are not in use.

By having a wireless controller, the components within a zone do not have to be located in the same area of the house, as with traditional heating systems. The components in any particular zone can be spread all through the house.



For example:

- Zone 1 - All of the bedrooms,
- Zone 2 - All of the bathrooms,
- Zone 3 - Kitchen and living room.

**! NOTE:** Zones can be setup as any combination of the Dimplex CONNEX™ enabled controlled heaters as long as there is one heater that is within 15m (50ft) of the controller and the subsequent heaters are within 15m (50ft) of the controller or any other heater.



### Events

The controller has been designed to divide each day into 4 different time settings for each day— Wake, Away, Home and Sleep.

-  Wake – Initial increase of heat to desired temperature use.
-  Away – A decreased temperature set point while the area is not in use.



## Product Overview

-  Home – An increased temperature set point for normal usage.
-  Sleep – Reduce temperature set point while you are sleeping.

**! NOTE:** When programming times for temperature events to take place, ahead of time, giving the temperature time to increase, i.e. your kitchen takes 17 minutes to increase in temperature from 18°C to 21°C, set the Home Event to occur 17 minutes before you arrive home.

As a default, values have been programmed for the Wake and Sleep times and temperatures for all 4 zones, for all 7 days.

*Wake:* 21.0°C (70.0°F), 6:00AM

*Sleep:* 18.0°C (64.0°F), 11:00PM

**! NOTE:** There are no initial settings for Home and Away events.

To change these values there is a program function which will guide you through the adjustment/setup of these values for a single day or group of days, or multiple zones.

**! NOTE:** You do not need to have settings for all events. An event can be skipped by entering --:-- for the time entry. (Increase

time to 11:59pm/23:59 and the next number will be --:-- before it continues to 12:00am/00:00.)

# Installation

## Site Selection for Installation

When choosing a location for the Multi-zone Wi-Fi Controller, a convenient and accessible location should be chosen. The range of the Controller is approximately 50 ft (15 m).

The Multi-zone Wi-Fi Controller can control multiple Dimplex CONNEX™ heaters outside of the 50 ft (15 m) range, by locating heaters within 50 ft (15 m) of any other heater in the system.

## Downloading the App



The Dimplex CONNEX™ App is available for your Apple or Android device.



Search  
"Dimplex  
CONNEX"



## Surface Installation

1. Determine an appropriate place to locate the Multi-zone Wi-Fi controller, in the vicinity of a 120V wall receptacle and a Wi-Fi router with an active internet connect.
2. Remove the controller and


installation hardware from its package.

3. Remove the support stand and compartment cover from the unit. (Figure 1 & 2)
4. Install the power cord to the unit in the provided USB connection.
5. Route the wire in the track

**Figure 1**

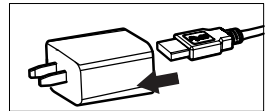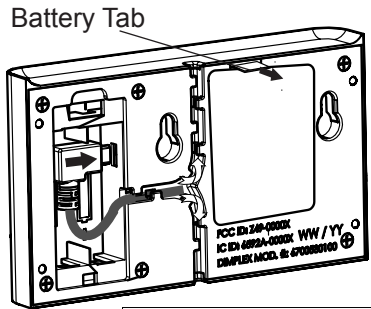

**Figure 2**

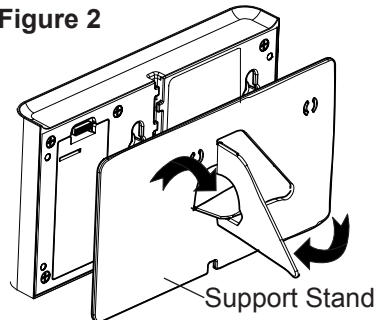

## Installation

most appropriate to your installation, and replace the compartment cover.

**! NOTE:** There is a plastic tab which is associated to a back up battery to assist with the synchronization of the heaters. It is recommended that the tab remain in place until the time of synchronization. (Figure 3)


6. Adjust the support stand to have the stand open and secure. (Figure 2)
7. Reattach the support stand to the unit.
8. Plug the unit into the wall receptacle and place unit in desired location.

### Wall Mount Installation


1. Determine an appropriate location to mount the Multi-zone Wi-Fi controller, in the vicinity of a 120V wall receptacle and a Wi-Fi router with an active internet connect.
2. Remove the Multi-zone Wi-Fi Controller and installation hardware from its package.
3. Remove the support stand and compartment cover from the unit. (Figure 1 & 2)
4. Install the power cord to the

**Figure 3**

Battery Tab

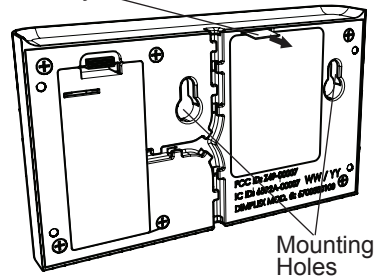

**Figure 4**

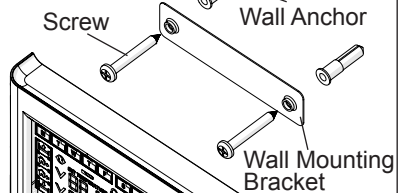

unit in the provided USB connection, located under the compartment cover.

5. Route the wire in the track most appropriate to your installation, and replace the compartment cover.

**! NOTE:** There is a plastic tab





## Installation

which is associated to a back-up battery to assist with the synchronization of the heaters. It is recommended that the tab remain in place until the time of synchronization. (Figure 3)


6. Using the Wall Mounting Bracket, mark and drill the holes for the wall anchors. (Figure 4)
7. Install the screws through the Wall Mounting Bracket and into the anchors.

**! NOTE:** Ensure that the flat side of the Wall Mounting Bracket is against the wall and the screws are installed so that they rest against the extended portion of the hole. The space will allow screws to sit in the mounting holes correctly.

8. Slide the unit onto the screws.
9. Plug the unit into the wall receptacle.

# Initial Setup

Figure 5 - Full Touch Screen Display

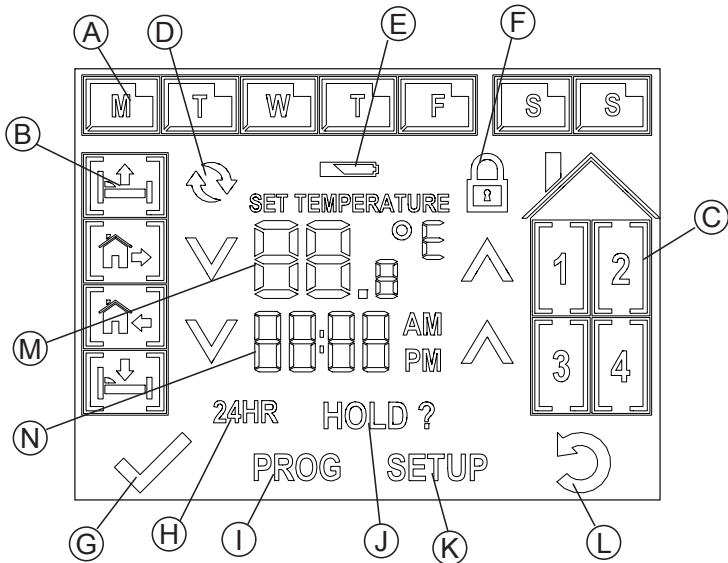

- |                         |                        |
|-------------------------|------------------------|
| A. Day Icons            | H. 24 Hour Icon        |
| B. Event Icons          | I. Program Icon        |
| C. Zone Icons           | J. Hold Icon           |
| D. Synchronization Icon | K. Setup Icon          |
| E. Low Battery Icon     | L. Go Back Icon        |
| F. Lock Icon            | M. Temperature Display |
| G. Check Icon           | N. Time Display        |

## Initial Setup

Once the App has been installed, the program will step through the account setup, connection to the local router with an active internet connect and the Multi-zone Wi-Fi controller.


**! NOTE:** If the unit is correctly connected, the display will be updated with the current day and time.


Once power has been provided to the unit, the Setup program will begin. The initial set-up includes: Day, Type of Clock (12hr or 24hr), Current Time and Temperature Measurement Preference.






**! NOTE:** Since the unit will be connected to Wi-Fi, the day and time will automatically set and this section can be skipped over.

1. Select the current day of the week, by pressing the icon on the screen.






**! NOTE:** As each selection is made, the selected icon will become solid and the Check Icon  will appear to move to the next option.

2. Press the Check Icon  to save selection.

3. The default type of clock is a 12hr. The clock can be changed to a 24hr by pressing the  icon. (To revert back, press the   icon.)
4. Using the  and  icons, you can then set the time.

**! NOTE:** If the button is held down for longer the time will increase faster.

**! NOTE:** If you notice that the wrong day has been selected you can press the Go Back Icon  to revert to the previous screen.

5. Press the Check Icon  to save selection.
6. The °C icon will begin to flash as the default. To switch to °F, press the flashing °C.
7. Once the day, time and temperature preference have been set, press the Check Icon  to go into operation mode.

**! NOTE:** If the time needs to be adjusted after this setup, you can press and hold the time display for 3 seconds to go into the time adjustment mode or press setup to adjust all of the settings.

## Initial Setup

**! NOTE:** At any time, holding down the temperature set point will toggle the temperature measurement preference.





### Heater Synchronization

The controller features CONNEX™, a wireless technology that works with Dimplex CONNEX™ enabled heaters to provide simple whole home connectivity and comfort. CONNEX™ controllers are available to control one or multiple heaters within a 50' (15 m) radius. In order for the controller to have this function the CONNEX™ enabled heater and the controller will need to be synchronized.


**! NOTE:** For ease of setup, it is suggested that the controller be taken to each heater to complete the synchronization process. The controller is equipped with a small battery that will allow the unit to be unplugged from the wall, for up to 3 hours, to be able to move to each heater for synchronization. Synchronization can be completed after the battery has died, by moving the controller to each heater and plugging it into a nearby receptacle.

**⚠ CAUTION:** Always press the

*icons with a blunt object. Sharp objects like pen and pencil points may damage the touch screen.*

1. Press the  icon to put the controller into synchronization mode.
2. All four (4) zone icons will begin to flash.
3. Select the zone that the specific heater will be associated with. That icon will become solid.
4. On the heater press and hold the **V** button for 3 seconds, both the  and  icons will begin to flash.
5. Press the **-**, **+** and then **V**, on the heater.
6. Within 10 seconds press the  icon on the controller.

**! NOTE:** When the synchronization is complete the display on the heater will switch to the new settings from the controller.

7. Repeat steps 3-5 until all of the heaters are synchronized.
8. Press the  icon to revert back to operation mode.

**! NOTE:** When the controller is running on battery power, Wi-Fi function is disabled.

## 👉 Program Schedule Setup


### Program Setup "Quick Set"

The program function guides the user through the setup for each of the time settings (Wake, Away, Home and Sleep), based on the selected zones to set the desired temperatures.



**! NOTE:** It is recommended that the main overall programming be done first - i.e. bedrooms during the work week and program the entire day, then perform another setup for another zone to speed up the programming. After the main programming is complete, fine tuning can be done on a single day, zone or event basis, by holding down the day or event icon for 3 seconds.

**! NOTE:** There is a blank setting table at the back of this manual to assist with ensuring that all of the required events and zones have been setup to the desired times and temperatures.

**⚠ CAUTION:** Always press the icons with a blunt object. Sharp objects like pen and pencil points may damage the touch screen.


1. Press the **PROG** icon to start the setup. The first setting will be for the Wake Event 

. The zone icons will begin to flash.

**! NOTE:** At any time, pressing the  icon will return to the previous step. If the  icon is held for 3 seconds it will return to the main operating screen.

2. Select the zone(s) that the settings are going to be applied.




**! NOTE:** As each zone is selected it will become solid and the remaining zones will continue to flash.

3. Press the  icon.
4. The day icons will begin to flash.







5. Select the days that the settings are going to be applied.

**! NOTE:** As each day is selected it will become solid and the remaining days will continue to flash.

6. Press the  icon.
7. Using the  and  icons on either side of the time setting, set the time for the Wake event to occur.

## Program Schedule Setup

8. Press the  icon.
9. Using the  and  icons on either side of the temperature setting, set the temperature for the Wake event to adjust to.
10. Press the  icon.
11. Repeat steps 2-10 for each of the other events - Away, Home and Sleep.


**! NOTE:** There is a blank setting table at the back of this manual to assist with ensuring that all of the required events and zones have been setup to the desired times and temperatures.

### **Factory Reset**

If the programmed settings need to be adjusted significantly, it is possible to Reset the controller back to the Factory settings.

1. Press and hold the **SETUP** icon for 10 seconds.
2. Follow the prompts to confirm the day, time, and unit of measurement.

## General Functions

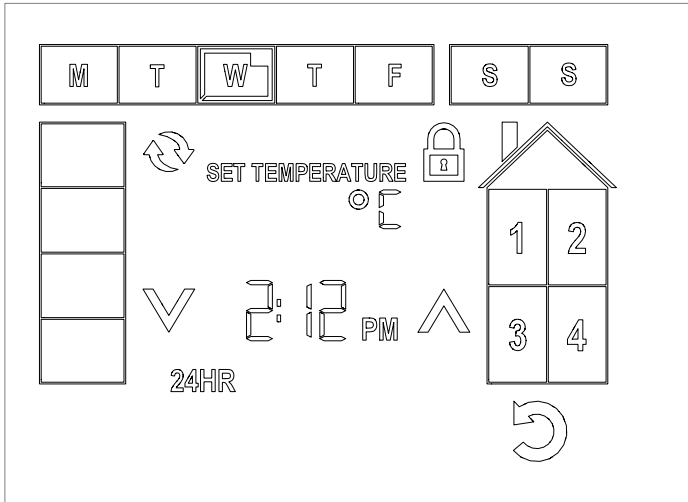


**⚠ CAUTION:** Always press the icons with a blunt object. Sharp objects like pen and pencil points may damage the touch screen.

During regular operation you can press the **SETUP** icon, to make changes to the basic setup of the controller. This includes:

1. Day of the Week
2. Time and/or Type of Clock
3. Temperature Measurement Unit
4. Enable the Sync Function or
5. Enable the Lock Function.

**! NOTE:** If the day, time or temperature measurement



preference is adjusted, then the synchronization and lock functions are no longer available until the changes have been accepted or reset (the  icon has been pressed).

### 1. Changing the Day of the Week

**! NOTE:** Since the unit will be connected to Wi-Fi, the day and time will automatically set and this section will not be applicable.

When you initially go in to the setup menu, the current day of the week will appear, it will be flashing. Select the desired day of the week (the new selection will

 
 
## General Functions


 
also be flashing) and the  icon will appear. Press the  icon to save the changes and revert back to operation mode.

**! NOTE:** The time can also be changed by holding down the time display icon for 3 seconds, but only the Day, Time and Type of clock will be displayed to change.

### 2. Changing the Time

**! NOTE:** Since the unit will be connected to Wi-Fi, the day and time will automatically set and this section will not be applicable.

When you initially go into the setup menu, the  and  icons for the time adjustment will be flashing and the optional selected time setting also will appear (flashing).


Using the  and  icons the time can be adjusted.

**! NOTE:** If the button is held down for longer the time will increase faster.


By pressing the flashing time setting, the time display will change to match the new setting. I.e. 2:12pm will change to 14:12.

As soon as any adjustment is

made the  icon will appear.


Press the  icon to save the changes and revert back to operation mode.


**! NOTE:** The time can also be changed by holding down the time display icon for 3 seconds, but only the Day, Time and Type of clock will be displayed to

change. Press the  icon to save the changes and revert back to operation mode.

### 3. Changing the Temperature Measurement Unit

When you initially go into the setup menu, the temperature will disappear and the temperature measurement icon will begin to flash. By pressing the icon it will toggle between °C and °F.

As soon as any adjustment is made the  icon will appear.

Press the  icon to save the changes and revert back to operation mode.

**! NOTE:** The Temperature Measurement unit can also be changed by holding down the temperature setpoint display for 3 seconds, and it will change to the



## General Functions

other Temperature Measurement unit.

### 4. Synchronization Function



The controller features CONNEX™, a wireless technology that works with Dimplex CONNEX™ enabled heaters to provide simple whole home connectivity and comfort. CONNEX™ controllers are available to control one or multiple heaters within a 50' (15 m) radius. In order for the controller to have this function, the CONNEX™ enabled heater and the controller will need to be synchronized.


**! NOTE:** See Initial Setup section for detailed instructions.

### 5. Lock Function

The controller can be "Locked" so that the display on the controller is disabled to prevent any changes to the settings in the system.

*To Enable:*

1. Press the  Icon.
2. Enter the sequence Zone 1, Zone 2, Zone 3 and Zone 4, then press the  Icon.



The Controller will display the  Icon and continue to operate based on the settings and signals

from the controller.


**! NOTE:** Adjustments can be made to individual heaters by entering its specific unlock sequence and adjusting the set point.

**⚠ CAUTION:** The adjusted heater will only retain the new set point until an event occurs on the controller and a new set point is sent.

*To Disable:*

1. Press and hold the  Icon for 3 seconds.
2. Enter the sequence Zone 1, Zone 2, Zone 3 and Zone 4, then press the  Icon.

## Operation

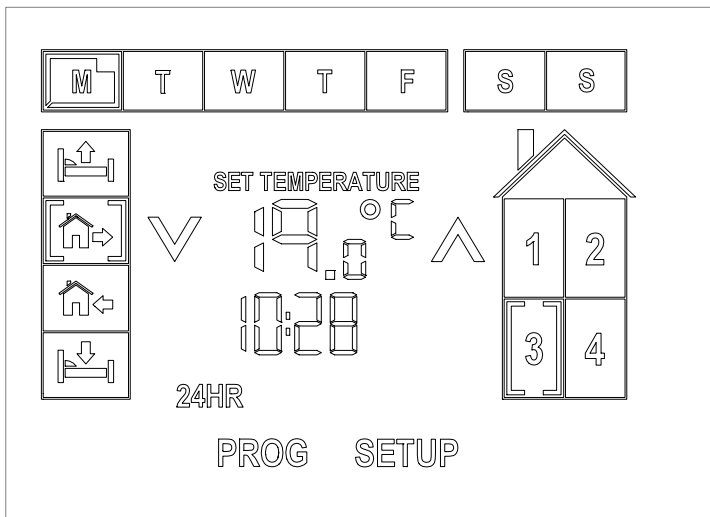

Once the programming is complete and the heaters have been synchronized, the controller has built in functions that can add to the overall flexible benefits of the system.

During regular operation, the temperature setting in each Zone can be displayed by selecting the desired Zone.

To see the setting for the next Day or Event for a particular Zone, press the corresponding icon to display the setting and set time. The setting will remain displayed for 5 seconds, before reverting back to the regular oper-

ating screen.

**CAUTION:** Always press the icons with a blunt object. Sharp objects like pen and pencil points may damage the touch screen.

### Set Point Changes

The user has the option at any time to adjust a particular temperature setting without changing the main program.

There are two types of temperature changes that can be used:



1. Temporary or
2. Indefinite

### Temporary Temperature Changes

If the temperature in a particular

## Operation



zone or multiple zones needs to be adjusted for the remainder of the current event a Temporary Temperature Change can be done.

1. Select the Zone to which the temperature change will be applied.
2. Using the  and  icons, adjust the set point to the desired temperature.
3. Select additional Zones if needed.


**! NOTE:** All of the settings will adjust to these programmed settings at the next event for each of the specified zones.


### Indefinite Temperature Changes

If the temperature in a particular zone or multiple zones needs to be adjusted for an indefinite period of time, an Indefinite Temperature Hold can be done.

1. Select the Zone to which the temperature hold will be applied.
2. Using the  and  icons, adjust the set point to the desired temperature.
3. Press and hold the **HOLD** Icon.
4. Select additional Zones if

needed.

5. Press the  icon to save the changes and revert back to operation mode.

**! NOTE:** To exit the hold mode, the user can press the  icon. This will remove all holds that have been applied.

### Factory Reset

If the programmed settings need to be adjusted significantly, it is possible to Reset the controller back to the Factory settings.

1. Press and hold the **SETUP** icon for 10 seconds.
2. Follow the prompts to confirm the day, time, and unit of measurement.



## Maintenance

### Surface Cleaning

Use a cloth dampened with warm water only to clean the housing and glass display of the wall setter. Do not use abrasive cleaners.

If the display needs to be cleaned, putting the unit in the lock function will allow you to remove any fingerprints or dirt without changing any settings.

### Battery Replacement (Figure 6)

The Multi-zone programmable CONNEX™ Controller contains a CR2032 (3V) battery. The intention of the battery is to allow heater synchronization to be carried out more conveniently. Replacement of the battery will only be required if additional synchronization needs to take place and a convenience receptical is not in the vicinity of the heater.

To replace the battery:

1. Remove stand from unit or remove the unit from the wall.
2. Access the battery by removing the 6 screws that attach the back cover to the unit.
3. Replace the battery.

**! NOTE:** Ensure that the battery is installed under the bottom battery prongs.

4. Reassemble and remount the remote control.

**! NOTE:** Multi-zone programmable CONNEX™ Controller will retain all settings while battery is removed and will revert to those settings when power is restored.



Battery must be recycled or disposed of properly. Check with your Local Authority or Retailer for recycling advice in your area.

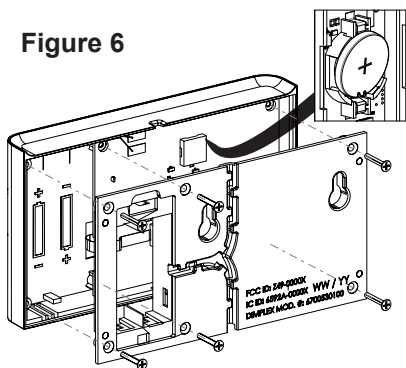


Figure 6

## Warranty

**LIMITED WARRANTY:** All Multi-zone programmable CONNEX™ Controllers are warranted against defects in workmanship and materials for three years from date of sale. This warranty does not apply to damage from accident, misuse, or alteration, nor to equipment improperly installed or wired or maintained in violation of the instruction sheet. This limited warranty applies only to purchases made in any province of Canada except for Yukon Territory, Nunavut, or Northwest Territories or in any of the 50 States of the USA (and the District of Columbia) except for Hawaii and Alaska. This limited warranty applies to the original purchaser of the product only and is not transferable. No other written or oral warranty applies. No employee, agent, dealer or other person is authorized to give any warranties on behalf of Dimplex. The customer shall be responsible for all costs incurred in the removal or reinstallation and shipping of the product for repairs. Within the limitations of this warranty, inoperative units shall be returned to the nearest Dimplex authorized service center, and we shall repair or replace, at our option, at no charge to you with return freight paid by Dimplex. It is agreed that such repair or replacement is the exclusive remedy available from Dimplex and that DIMPLEX IS NOT RESPONSIBLE FOR DAMAGES OF ANY KIND, INCLUDING INCIDENT-

TAL AND CONSEQUENTIAL DAMAGE. Some States do not allow the exclusion or limitation of consequential damages, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.



## Reference Tables

### Default Settings

|                      |        | Wake<br>      | Leave<br>    | Home<br>     | Sleep<br>      |
|----------------------|--------|---------------|--------------|--------------|----------------|
| <b>Monday</b><br>    | Zone 1 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 2 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 3 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 4 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
| <b>Tuesday</b><br>   | Zone 1 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 2 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 3 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 4 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
| <b>Wednesday</b><br> | Zone 1 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 2 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 3 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 4 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
| <b>Thursday</b><br>  | Zone 1 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 2 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 3 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 4 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
| <b>Friday</b><br>    | Zone 1 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 2 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 3 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 4 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
| <b>Saturday</b><br>  | Zone 1 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 2 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 3 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 4 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
| <b>Sunday</b><br>    | Zone 1 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 2 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 3 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |
|                      | Zone 4 | 21.0C, 6:00AM | --C, --:--AM | --C, --:--PM | 18.0C, 11:00PM |



# Reference Tables

 


 

 

 
 
 
 
## Sample Settings

**Zone 1:** Bedroom 1, 2, 3

**Zone 3:** Kitchen

**Zone 2:** Bathroom 1, 2

**Zone 4:** Living Room

|   |        | Wake<br> | Leave<br> | Home<br> | Sleep<br> |
|---|--------|---|--|---|--|
| <b>Monday</b><br>     | Zone 1 | 21.0C, 6:00AM   | 17.0C, 8:00AM  | 21.0C, 9:00PM   | 18.0C, 11:00PM   |
|   | Zone 2 | 21.0C, 6:00AM   | 17.0C, 8:00AM  | 21.0C, 8:00PM   | 18.0C, 10:00PM   |
|   | Zone 3 | 21.0C, 8:00AM   | 17.0C, 9:00AM  | 21.0C, 5:00PM   | 18.0C, 7:00PM  |
|   | Zone 4 | --C, --:--AM  | --C, --:--AM   | 21.0C, 5:00PM   | 18.0C, 9:00PM  |
| <b>Tuesday</b><br>    | Zone 1 | 21.0C, 6:00AM   | 17.0C, 8:00AM  | 21.0C, 9:00PM   | 18.0C, 11:00PM   |
|   | Zone 2 | 21.0C, 6:00AM   | 17.0C, 8:00AM  | 21.0C, 8:00PM   | 18.0C, 10:00PM   |
|   | Zone 3 | 21.0C, 8:00AM   | 17.0C, 9:00AM  | 21.0C, 5:00PM   | 18.0C, 7:00PM  |
|   | Zone 4 | --C, --:--AM  | --C, --:--AM   | 21.0C, 5:00PM   | 18.0C, 9:00PM  |
| <b>Wednesday</b><br>  | Zone 1 | 21.0C, 6:00AM   | 17.0C, 8:00AM  | 21.0C, 9:00PM   | 18.0C, 11:00PM   |
|   | Zone 2 | 21.0C, 6:00AM   | 17.0C, 8:00AM  | 21.0C, 8:00PM   | 18.0C, 10:00PM   |
|   | Zone 3 | 21.0C, 8:00AM   | 17.0C, 9:00AM  | 21.0C, 5:00PM   | 18.0C, 7:00PM  |
|   | Zone 4 | --C, --:--AM  | --C, --:--AM   | 21.0C, 5:00PM   | 18.0C, 9:00PM  |
| <b>Thursday</b><br>   | Zone 1 | 21.0C, 6:00AM   | 17.0C, 8:00AM  | 21.0C, 9:00PM   | 18.0C, 11:00PM   |
|   | Zone 2 | 21.0C, 6:00AM   | 17.0C, 8:00AM  | 21.0C, 8:00PM   | 18.0C, 10:00PM   |
|   | Zone 3 | 21.0C, 8:00AM   | 17.0C, 9:00AM  | 21.0C, 5:00PM   | 18.0C, 7:00PM  |
|   | Zone 4 | --C, --:--AM  | --C, --:--AM   | 21.0C, 5:00PM   | 18.0C, 9:00PM  |
| <b>Friday</b><br>    | Zone 1 | 21.0C, 6:00AM   | 17.0C, 8:00AM  | 21.0C, 9:00PM   | 18.0C, 12:00PM   |
|   | Zone 2 | 21.0C, 6:00AM   | 17.0C, 8:00AM  | 21.0C, 8:00PM   | 18.0C, 11:00PM   |
|   | Zone 3 | 21.0C, 8:00AM   | 17.0C, 9:00AM  | 21.0C, 5:00PM   | 18.0C, 11:00PM   |
|   | Zone 4 | --C, --:--AM  | --C, --:--AM   | 21.0C, 5:00PM   | 18.0C, 11:00PM   |
| <b>Saturday</b><br> | Zone 1 | 21.0C, 8:00AM   | 17.0C, 10:00AM   | 17.0C, 10:00PM  | 18.0C, 12:00PM   |
|   | Zone 2 | 21.0C, 8:00AM   | 17.0C, 10:00AM   | 21.0C, 8:00PM   | 18.0C, 11:00PM   |
|   | Zone 3 | 21.0C, 9:00AM   | --C, --:--AM   | --C, --:--PM  | 18.0C, 11:00PM   |
|   | Zone 4 | 21.0C, 9:00AM   | --C, --:--AM   | --C, --:--PM  | 18.0C, 11:00PM   |
| <b>Sunday</b><br>   | Zone 1 | 21.0C, 8:00AM   | 17.0C, 10:00AM   | 17.0C, 10:00PM  | 18.0C, 11:00PM   |
|   | Zone 2 | 21.0C, 8:00AM   | 17.0C, 10:00AM   | 21.0C, 8:00PM   | 18.0C, 10:00PM   |
|   | Zone 3 | 21.0C, 9:00AM   | --C, --:--AM   | --C, --:--PM  | 18.0C, 7:00PM  |
|   | Zone 4 | 21.0C, 9:00AM   | --C, --:--AM   | --C, --:--PM  | 18.0C, 9:00PM  |



# Reference Tables

 


 



 
 
 

## User Settings

Zone 1: \_\_\_\_\_

Zone 3: \_\_\_\_\_

Zone 2: \_\_\_\_\_

Zone 4: \_\_\_\_\_

|  |        | Wake<br> | Leave<br> | Home<br> | Sleep<br> |
|--|--------|---|--|---|--|
| Monday<br>     | Zone 1 |   |  |   |  |
|  | Zone 2 |   |  |   |  |
|  | Zone 3 |   |  |   |  |
|  | Zone 4 |   |  |   |  |
| Tuesday<br>    | Zone 1 |   |  |   |  |
|  | Zone 2 |   |  |   |  |
|  | Zone 3 |   |  |   |  |
|  | Zone 4 |   |  |   |  |
| Wednesday<br>  | Zone 1 |   |  |   |  |
|  | Zone 2 |   |  |   |  |
|  | Zone 3 |   |  |   |  |
|  | Zone 4 |   |  |   |  |
| Thursday<br>   | Zone 1 |   |  |   |  |
|  | Zone 2 |   |  |   |  |
|  | Zone 3 |   |  |   |  |
|  | Zone 4 |   |  |   |  |
| Friday<br>    | Zone 1 |   |  |   |  |
|  | Zone 2 |   |  |   |  |
|  | Zone 3 |   |  |   |  |
|  | Zone 4 |   |  |   |  |
| Saturday<br> | Zone 1 |   |  |   |  |
|  | Zone 2 |   |  |   |  |
|  | Zone 3 |   |  |   |  |
|  | Zone 4 |   |  |   |  |
| Sunday<br>   | Zone 1 |   |  |   |  |
|  | Zone 2 |   |  |   |  |
|  | Zone 3 |   |  |   |  |
|  | Zone 4 |   |  |   |  |





**Dimplex North America Limited**

1367 Industrial Road

Cambridge ON

Canada N1R 7G8

© 2015 Dimplex North America Limited